Base Operation

Remote controller




1. Unit start
   Press ON/OFF on the remote controller, unit starts.

2. Select operation mode
   COOL button:Cooling mode
   HEAT button: Heating mode
   DRY button: Dehumidify mode

3.Select temp.setting
   Press TEMP+ / TEMP− button
   TEMP+ Every time the button is pressed, temp.setting increase 1°C,if kept depressed, it will increase rapidly
   TEMP− Every time the button is pressed, temp.setting decrease 1°C,if kept depressed, it will decrease rapidly
   Select a desired temperature.

4.Fan speed selection
   Press FAN button. For each press, fan speed changes as follows:
   Remote controller:



Air conditioner is running under displayed fan speed. When FAN is set to AUTO, the air conditioner automatically adjusts the fan speed according to room temperature.

Operation Mode	Remote Controller
AUTO	
COOL	
DRY	
HEAT	
FAN	


Sleep Operation

Press EXTRA FUNCTION button to enter additional options, when cycle display to , will flash. And then press CONFIRM CANCEL enter to sleep function.




Operation Mode

1. In COOL,DRY mode
1 hours after SLEEP mode starts,temp.will become 1°C higher than temp.setting.After another 1 hours,temp.rises by 1°C futher.The unit will run for further 6 hours then stops Temp. is higher than temp.setting so that room temperature won't be too low for your sleep.

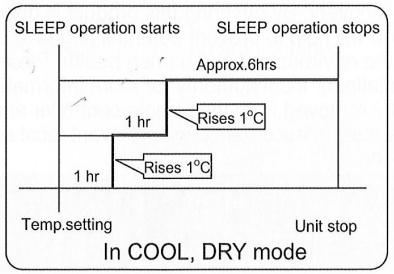

In COOL, DRY mode

2. In HEAT mode
1 hours after SLEEP mode starts,temp will become 2°C lower than temp.setting.After another 1 hours,temp decrease by 2°C futher.After more another 3 hours,temp. rises by 1°C futher.The unit will run for further 3 hours then stops.Temp.is lower than temp. setting so that room temperature won't be too high for your sleep.

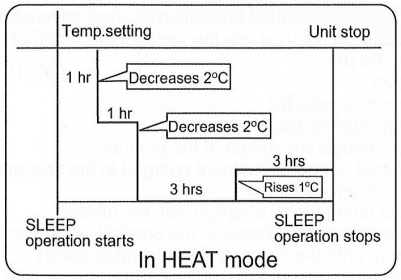

In HEAT mode

3. In AUTO mode
   The unit operaters in corresponding sleep mode adapted to the automatically selected operation mode.

4. In FAN mode
   It has no SLEEP function.

5.Set the wind speed change when sleeping
   If the wind speed is high or middle before setting for the sleep, set for lowing the wind speed after sleeping.
   If it is low wind, no change.

Note

When TIMER function is set, the sleeping function can't be set up .After the sleeping function is set up, if user resets TIMER function, the sleeping function will be cancelled; the machine will be in the state of timing-on.

POWER/QUIET Operation

(1) POWER Operation

When you need rapid heating or cooling, you can use this function.

Press EXTRA FUNCTION button to enter additional options, when cycle display to , will flash, and then press CONFIRM CANCEL ,enter to power function. When cancel the function, please enter additional options again and to cancel power function.

(2) QUIET Operation

You can use this function when silence is needed for rest or reading.

Press QUIET button, the remote controller will show , and then achieve to the quiet function. Press again this QUIET button , the quiet function will be cancelled.

Note :

During POWER operation, in rapid HEAT or COOL mode , the room will show inhomogeneous temperature distribution. Long period QUIET operation will cause effect of not too cool or not too warm.